


PLEASE READ AND FOLLOW THESE INSTRUCTIONS PRIOR TO USING YOUR EZ-ON HOSE PRESS

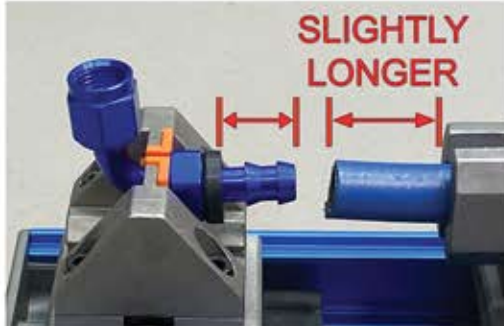

The length of the hose extended from the clamps should be 1/4" longer than the length of the barb so it can be fully installed without hitting the bumper.



STOP IMMEDIATELY if the hose stops before it is fully installed. Check to see if the hose carriage is against the bumper.


OPERATING THE EZ-ON HOSE PRESS



Install angled fittings as shown. Use the plastic inserts to protect anodized fittings. **DO NOT OVER TIGHTEN.**



For straight fittings, use the appropriately sized round adaptor as shown.

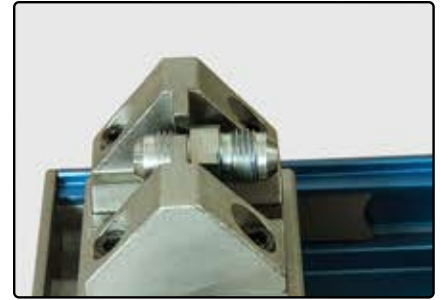

A JIC fitting can be used as a holder for straight fittings.



The extended jaws are for -4, -6, and -8 hose sizes.




The short jaws are for -10, -12, and -16 hose sizes.



Install the hose with a ratchet, or similar tool, and an 17 mm socket.

OPERATING TIPS

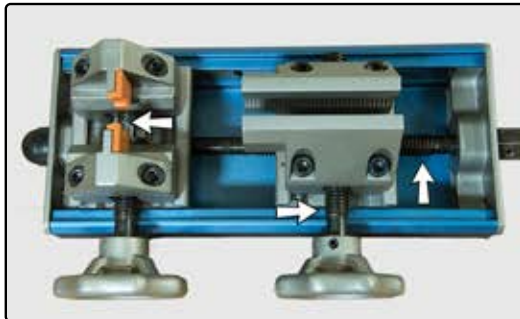

Lubricate the lead screw and threads on the vise wheels with a light oil before using it for the first time and routinely thereafter for trouble-free service.



If your hose is interfering with the installation process, the hose clamps and vise can be reversed. This will free up the area around the drive screw.



To remove the inserts, use a pin punch or similar as shown.



Use a ratchet and 17 mm socket to clamp the hose tighter if necessary.




If necessary, use a pair of vise grips for extra clamping force.



If necessary, lube the barb for easier installation.



Some angled fittings point upward. To solve this issue, use your free hand to keep the barb level with the hose.

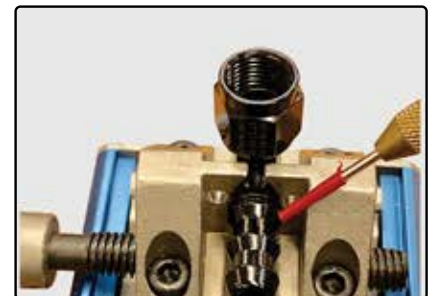

If the fitting is still pointing upward, remove the plastic inserts and use your free hand to guide the hose on.